

How to Correctly Sign Off Netflix on Smart TV

In order to correctly sign off your Netflix account on both the LG and Samsung Smart TV perform the following:

1. Be sure Netflix is in 'Home' on the menu, not other menu



selections, like 'Search':

2. Next, perform the following button sequence using the arrow keys on the TV's remote control:
 - Up arrow, Up arrow (Up arrow twice)
 - Down arrow, Down arrow (Down arrow twice)
 - Left arrow, Right arrow
 - Left arrow, Right arrow
 - Up arrow, Up arrow, Up arrow, Up arrow (Up arrow 4 times)
3. A new menu will now appear. Now select 'Sign Off'. ***DO NOT*** select 'Sign Out'.