


Gas Stove Tutorial

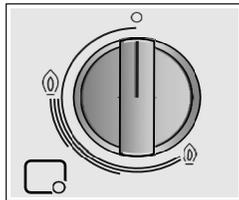

- Off position: Control knobs are in vertical position (as shown)



- Highest flame is at the 9 o'clock position

Lowest flame is at the 5 o'clock position

IGNITION:

- Press the control knob of the selected burner and turn it to the left to the highest flame level. As long as the control knob is held down, the burner will generate sparks. The flame ignites. Wait a few seconds...
- Release the control knob.
- Turn the control knob to the desired position.
- Turning OFF: turn the control knob counterclockwise to vertical position as shown above

Note: If there is no ignition, turn off the burner and repeat the steps described above.

This time, hold down the control knob for a longer period of time (up to 6 seconds).


Warning: If the flame does not ignite after 10 seconds, turn off the burner and open the door or window of the room. Before turning the burner back on, wait at least one minute.

Beware: When the burners are off and a control is pressed down by accident, example: while cleaning, the igniter spark will activate. Simply decompress the control button.

Tutorial sulla stufa a gas



- Posizione off: le manopole di controllo sono in posizione verticale (come mostrato)

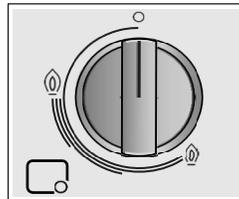

- La fiamma più alta è a ore 9

La fiamma più bassa si trova a ore 5

ACCENSIONE:

- Premere la manopola di controllo del bruciatore selezionato e ruotarla verso sinistra fino al livello di fiamma più alto. Finché si tiene premuta la manopola di controllo, il bruciatore genererà scintille. La fiamma si accende. Aspetta qualche secondo...
- Rilasciare la manopola di controllo.
- Ruotare la manopola di controllo nella posizione desiderata.
- Spegnimento: ruotare la manopola di controllo in senso

antiorario in posizione verticale come mostrato sopra

NOTA: Se non c'è accensione, spegnere il bruciatore e ripetere i passaggi sopra descritti.

Questa volta, tenere premuta la manopola di controllo per un periodo di tempo più lungo (fino a 6 secondi).

Attenzione: Se la fiamma non si accende dopo 10 secondi, spegnere il bruciatore e aprire la porta o la finestra della stanza. Prima di riaccendere il bruciatore, attendere almeno un minuto.

Attenzione: quando i bruciatori sono spenti e un comando viene premuto accidentalmente, esample: durante la pulizia, si attiverà la scintilla dell'accenditore. Basta decomprimere il pulsante di controllo.